



## Lock a channel from being viewed without the use of a PIN.

### Edit Locked

1. Push the “Menu” button on your remote. Arrow down to “Settings”, options will appear on side.
2. Arrow over and down to “Parental” to open the Parental Controls menu.
3. Arrow down and select “Edit Locked”.
4. You will be asked to enter your Ratings PIN (if you have not changed it to a personal PIN enter 0000 (4-zeroes) and select “OK”.
5. A list of channels will display. You can use the up/down arrow or page buttons to move through the list. When you arrive at the channel you want to lock press the “OK” button and the channel will be added to the locked list. (STB 140 & up, a green check mark will appear in the box, the box will turn red on 110’s)
6. Once you have made your selection and you are finished locking channels press the “Blue” button (140’s & up) on the remote to save your selections. For the 110’s, exit the screen.
7. Your PIN will be required to view “Locked” channels.
8. To remove the Lock repeat the steps above and when you select “OK” on the blocked channel the check mark will be removed. Press the “Blue” button on the remote to save your changes.

